



PRESTO®

Cool Touch Electric Griddle

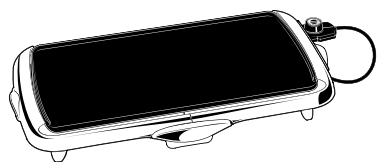

Instructions

This is a  Listed appliance. The following important safeguards are recommended by most portable appliance manufacturers.


IMPORTANT SAFEGUARDS

To reduce the risk of personal injury or property damage, when using electrical appliances basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against electrical shock, do not immerse control, cord, or plug in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or in the event the appliance malfunctions or has been damaged in any manner. Do not operate if the legs and/or cool-touch base become cracked or damaged. Return the appliance to the Presto Factory Service Department (see page 2) or to the nearest Presto Authorized Service Station for examination, repair, or electrical or mechanical adjustment.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner or in a heated oven.
11. It is recommended that this appliance not be moved when it contains hot oil or other hot liquid.
12. Always attach heat control to appliance first, then plug cord into wall outlet. To disconnect, turn control to OFF then remove plug from wall outlet.
13. Do not use appliance for other than intended use.

SAVE THESE INSTRUCTIONS

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY.

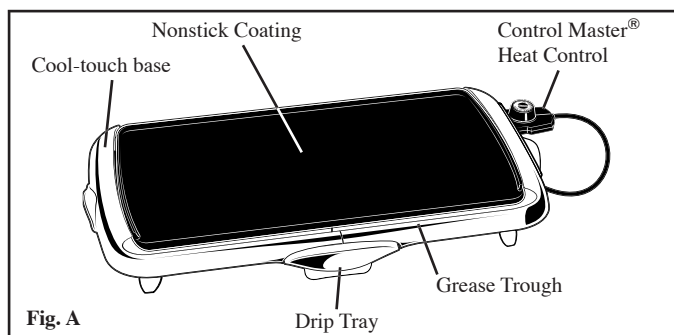

How to Use

Before using for the first time, become familiar with the griddle features, Fig. A. Wash griddle in dishwasher or in warm sudsy water, rinse, and dry. Do not immerse Control Master® heat control or let the heat control come in contact with any liquid. "Season" the nonstick cooking surface by rubbing lightly with cooking oil. Remove excess oil with paper towel.

1. Place griddle on a dry, level surface. To prevent heat damage to your countertop, always place a heat resistant counter protector under any heat generating appliance.
2. Insert Control Master® heat control into appliance. Be sure the control is inserted into the electrical pins on the appliance. Connect cord to a polarized outlet only. As a safety feature, this appliance has a polarized plug (one blade is wider than the other). This plug will only fit in a polarized outlet one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
3. Turn Control Master® heat control to desired temperature. Preheat griddle. Pilot light goes off when selected temperature is reached. During cooking, pilot light will go on and off indicating desired temperature is being maintained.
4. Prepare food for cooking. Because the griddle features a nonstick finish, food may be prepared with little or no oil.
5. Place food on griddle and cook according to temperature-timetable (page 2). Heat should be adjusted according to personal preference and particular food being cooked.
6. Turn heat control to OFF when cooking is completed. Unplug heat control from wall outlet then from appliance. Allow unit to cool before removing grease tray.

A short power supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord. Longer cord sets or extension cords may be used if care is properly exercised in their use.

If a long cord set or extension cord is used, the marked electrical rating of the cord set or extension cord should be at least as great as the electrical rating of the appliance. The longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.

Care and Cleaning

Before initial use and after each subsequent use, wash griddle in warm sudsy water, rinse, and dry. **Do not immerse Control Master® heat control in water or let it come in contact with any liquid.**

For best results use nylon, plastic, wooden, or rubber utensils. Do not use metal utensils as they may scratch the nonstick surface. Do not cut foods on the cooking surface.

If there is any food residue remaining on the cooking surface or on the cool-touch base, it should be removed after each use. To do so, scrub gently with a mild abrasive, such as Soft Scrub® mild abrasive cleanser* or a fine cleansing pad—nylon mesh or other ordinary cleansing pad. **Do not use steel wool or abrasive kitchen cleaners.**

* Soft Scrub is a registered trademark of the Clorox Co.

In time, the nonstick finish may darken over the heating element. To remove this discoloration, use a commercial cleaner designed for cleaning surfaces, such as dip-it® destainer**. These cleaners are available at most grocery and hardware stores. For best results, follow the manufacturer's instructions, being careful that any cleaning solution coming in contact with the cool-touch base or the exterior of the appliance is wiped off.

Some discoloration may occur inside the griddle drip tray. This is normal. The amount of discoloration will vary depending on the foods cooked and the temperature setting used. This discoloration is only visible from the inside of the drip tray and will not affect the performance of the griddle.

After treating the griddle with a commercial cleaner, it is recommended that the cooking surface be wiped lightly with a cooking oil before using.

The cool-touch base on the griddle is easy to keep attractive and looking new. Simply wipe away spills and drips as they occur. Any food residue remaining can be whisked away with a gentle stroke of a nylon mesh pad. Rinse and wipe dry.

IMPORTANT: To insure continued accuracy of the Control Master® heat control, avoid rough handling in use and storage.

**dip-it is a registered trademark of Ecolab, Inc.

Service Information

If you have any questions regarding the operation of your Presto® appliance or need parts for your appliance, **call our Consumer Service Department** weekdays 8:00 AM to 4:30 PM (Central Time) at 1-800-877-0441 or write:

NATIONAL PRESTO INDUSTRIES, INC.
Consumer Service Department
3925 North Hastings Way, Eau Claire, WI 54703-3703

You may also email your inquiries to **contact@GoPresto.com**. Inquiries will be answered promptly by telephone, letter, or email. When writing, please include a phone number and a time when you can be reached during weekdays if possible.

Any maintenance required for this product, other than normal household care and cleaning, should be performed by our Factory Service Department or any Presto Authorized Service Station. Be sure to indicate date of purchase and a description of defect when sending an appliance for repair. **Send appliances for repair to:**

CANTON SALES AND STORAGE COMPANY
Presto Factory Service Department
555 Matthews Dr., Canton, MS 39046-0529

Appliances may also be repaired at any Presto Authorized Service Station. Check your yellow pages for Service Stations near you.

The Presto Factory Service Department and Presto Authorized Service Stations are equipped to service all PRESTO® appliances and supply genuine PRESTO® parts. Genuine PRESTO® replacement parts are manufactured to the same exacting quality standards as PRESTO® appliances and are engineered specifically to function properly with its appliances. Presto can only guarantee the quality and performance of genuine PRESTO® parts. "Look-alikes" might not be of the same quality or function in the same manner. To ensure that you are buying genuine PRESTO® replacement parts, look for the PRESTO® trademark.

PRESTO® Limited Warranty

This quality PRESTO® appliance is designed and built to provide many years of satisfactory performance under normal household use. Presto pledges to the original owner that should there be any defects in material or workmanship during the first two years after purchase, we will repair or replace it at our option. Our pledge does not apply to damage caused by shipping. To obtain service under the warranty, return this PRESTO® appliance, shipping prepaid, to the nearest Presto Authorized Service Station, or to the Factory Service Department. When returning a product, please include a description of the defect and indicate the date the appliance was purchased.

We want you to obtain maximum enjoyment from using this PRESTO® appliance and ask that you read and follow the instructions enclosed. Failure to follow instructions, damage caused by improper replacement parts, abuse or misuse will void this pledge. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. This is Presto's personal pledge to you and is being made in place of all other express warranties.

NATIONAL PRESTO INDUSTRIES, INC.
 Eau Claire, WI 54703-3703

Temperature - Timetable

Food	Temperature	Approximate Cooking Time (in minutes)
Bacon	325° - 350°	5-8
Canadian Bacon	325° - 350°	3-4
Eggs, Fried	275° - 300°	3-5
Fish	325° - 375°	5-10
French Toast	325° - 350°	4-6
Ham ½" thick	325° - 350°	10-12
¾" thick	325° - 350°	14-16
Hamburgers ½" thick	325° - 375°	8-12
Liver	325° - 350°	5-10
Minute Steak	375° - 400°	4-5
Pancakes	350° - 400°	2-3
Pork Chops ½" thick	325° - 375°	15-20
¾" thick	325° - 375°	20-25
Potatoes, cottage fried	300° - 350°	10-12
Sausage, link	325° - 350°	20-30
precooked	325° - 350°	10-12
Sandwiches, grilled	325° - 350°	5-10
Steak, Beef 1" thick		
Rare	350° - 400°	6-7
Medium	350° - 400°	10-12
Steak, Beef 1½" thick		
Rare	350° - 400°	8-10
Medium	350° - 400°	18-20